



## Quantum Power for Digital Cameras and their Flashes



Digital Camera Model	Flash Model	Digital Camera Power Only						Camera + Flash
		Battery 1 Compact	Battery 1 / 1+	Battery 2	Battery 5/5+	Turbo Battery	Turbo 2x2 Battery	Turbo - Digicam & Flash Cables
ASSOC. PRESS - NC2000	-	-	-	-	DCK			-
CANON - D30, D60	<sup>2</sup> Canon 550EX	-	-	-	-	CD30	CD30	CD30   CZ
EOS D2000	Qflash T2	-	-	MDC3	-	CD3	CD3	CD3 / Qflash T2
EOS DCS 1, 3, 5	-	-	-	-	DCK			
EOS 1 D	<sup>2</sup> Canon 550EX				MDC6		SD6	SD6   CZ
EPSON -PC850Z, PC3000Z	-	XDC2	MDC2	-	-			-
FUJI - FinePix SI Pro, S2 Pro	<sup>2</sup> Nikon <b>SB28DX</b> <b>SB80DX</b>	XDC4	MDC4	-	-		SD4	SD4 / CKE
KODAK - DCS 315 330 DC 50 120	-	-		MDC5	-	CD5	CD5	-
DCS 315, 330	Qflash T2					CD5	CD5	CD5 / Qflash T2
DC 4800	-	XDC4	MDC4	-	-		SD4	-
DC 200 210 220 260 265 280 290 3400 5000	-	XDC2	MDC2	-	-		SD2	-
DCS 410, 420, 460	-	-	-	-	DCK			-
DCS 520, 620, 620x, 720x, 760	Qflash T2	-	-	MDC3	-	CD3	CD3	CD3 / Qflash T2
DCS 720X, 760	<sup>2</sup> Nikon SB28D	-	-	-	-	CD3	CD3	CD3 / CKE
DCS PRO BACK	Qflash T2	-	-	MDC3	-	CD3	CD3	CD3 / Qflash T2
DCS PRO BACK 645M, 645C	Qflash T2			MDC5		CD5	CD5	CD5   Qflash T2
DCS Pro 14n	<sup>2</sup> Nikon <b>SB28DX</b> <b>SB80DX</b>						SD8	SD8 / Qflash T2
MINOTAUR - Dimara RD 3000 5 7 7i S404	-	XDC4	MDC4	-	-		SD4	-
NIKON COOLPIX 800 880 885 900 950 4300	-	XDC2	MDC2	-	-		SD2	-
COOLPIX 900S 990 995 4500 5000, 5700	<sup>2</sup> Nikon <b>SB28DX</b>	XDC2	MDC2				SD2	SD2 / CK, CKE
D1, D1X, D1 H	<sup>2</sup> Nikon <b>SB28DX</b> <b>SB80DX</b>	-	-	-	-	CD1	CD1	CD1 / CKE
D100	<sup>2</sup> Nikon <b>SB28DX</b> <b>SB80DX</b>					CD100	CD100	CD100   CKE
OLYMPIUS - All C and D Series digital cameras except C50 D40	-	XDC2	MDC2	-	-		SD2	-
IE Series digital cameras	Qflash T2	XDC2	MDC2				SD2	SD2 / Qflash T2

<sup>1</sup> Dual Connector QT48 needed to power both digital camera and flash when used with Turbo. <sup>2</sup> Quantum Qflash and other manufactures flashes will also work with these cameras.